

## BRASIKane Manual Brush-cleaning Nozzle Header

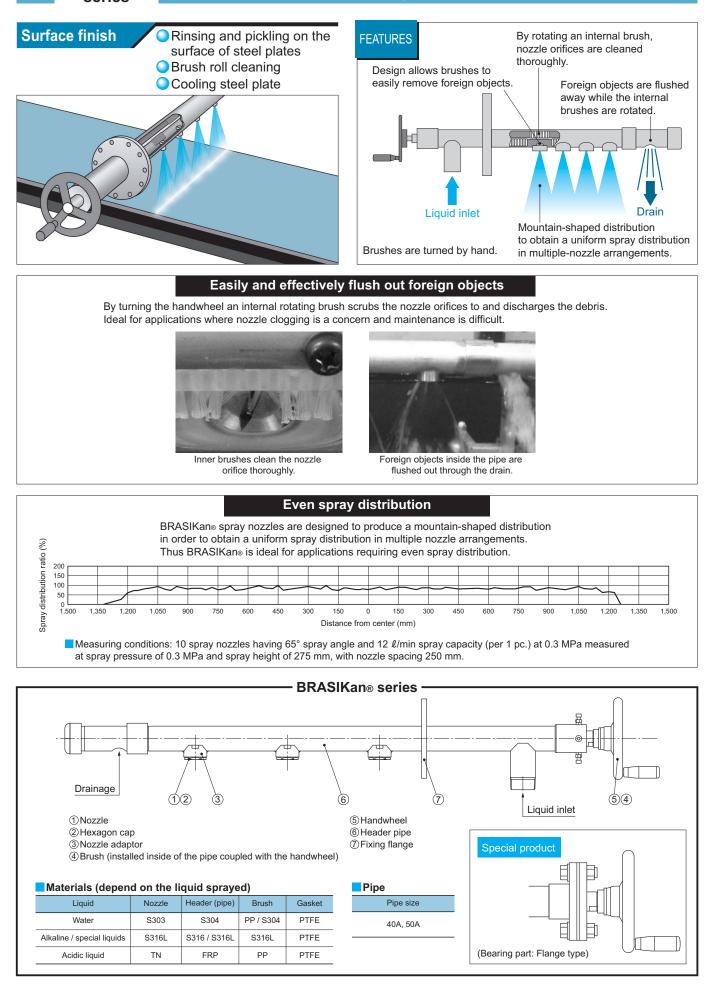

## BRASIKan® series Brush-cleaning Nozzle Header

## Nozzle specifications (per one nozzle)

Spray angle code	Spray capacity code	Spray capacity (ℓ/min)				Free passage
		0.2 MPa	0.3 MPa	0.5 MPa	0.7 MPa	diameter (mm)
65	40	3.27	4.00	5.16	6.11	1.3
	60	4.90	6.00	7.75	9.17	1.6
	80	6.53	8.00	10.3	12.2	1.8
	100	8.17	10.0	12.9	15.3	2.1
	120	9.80	12.0	15.5	18.3	2.2
	160	13.1	16.0	20.7	24.4	2.6
	200	16.3	20.0	25.8	30.6	2.9

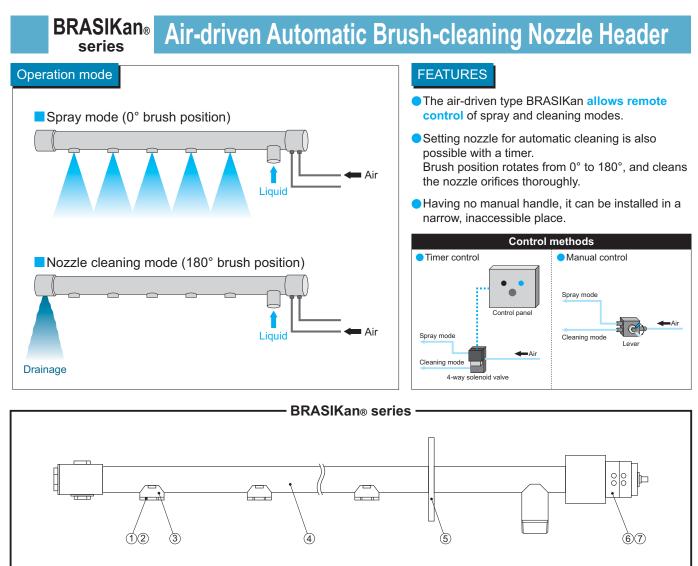

Nozzle
@Hexagon cap
@Nozzle adaptor
@Header pipe

⑤Fixing flange
⑥Actuator
⑦Brush (installed inside of the pipe coupled with the actuator)

## How to order

Inquiry drawing forms are available to ensure we can correctly meet the specifications you require. Please inquire with us for details.