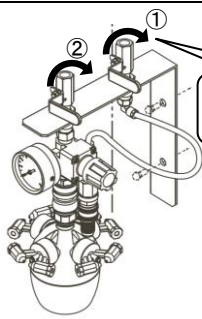
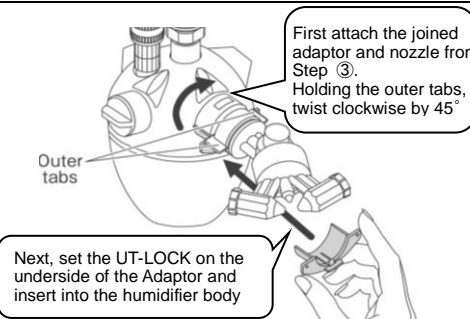
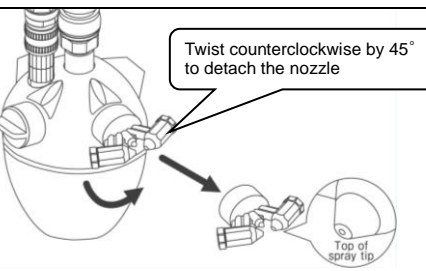
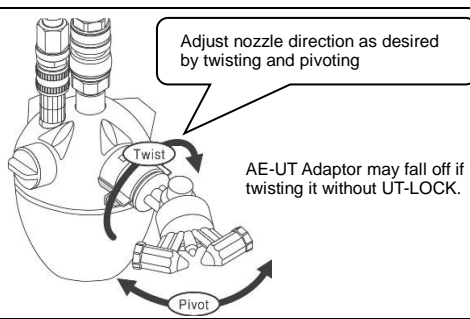
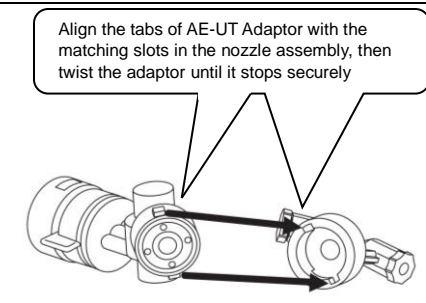
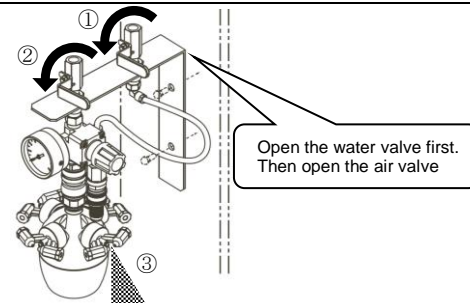


AE-UT Adaptor Instruction Manual

Thank you for purchasing the AE-UT Adaptor. You are requested to read this instruction manual to acquire full understanding of the construction and performance and follow the procedure below for installation. Make sure to use "UT-LOCK"; this component is necessary to prevent the AE-UT Adaptor from turning with the nozzle when changing spray direction.



● How to install the AE-UT Adaptor

<p>① Close water and air valves to stop spraying.</p>  <p style="border: 1px solid black; padding: 5px; display: inline-block;">Close the water valve first. Then close the air valve</p>	<p>④ Attach the joined adaptor and nozzle from Step ③ and the UT-LOCK to the humidifier body.</p>  <p style="border: 1px solid black; padding: 5px; display: inline-block;">First attach the joined adaptor and nozzle from Step ③. Holding the outer tabs, twist clockwise by 45°</p> <p style="border: 1px solid black; padding: 5px; display: inline-block;">Next, set the UT-LOCK on the underside of the Adaptor and insert into the humidifier body</p>
<p>② Detach the nozzle from the humidifier body.</p>  <p style="border: 1px solid black; padding: 5px; display: inline-block;">Twist counterclockwise by 45° to detach the nozzle</p> <p style="font-size: small;">Plastic nozzle tips are fragile and must be handled with care. Be careful not to touch the top of the nozzle tips.</p>	<p>⑤ Adjust the nozzle direction.</p>  <p style="border: 1px solid black; padding: 5px; display: inline-block;">Adjust nozzle direction as desired by twisting and pivoting</p> <p style="font-size: small;">AE-UT Adaptor may fall off if twisting it without UT-LOCK.</p>
<p>③ Fit the AE-UT Adaptor onto the nozzle.</p>  <p style="border: 1px solid black; padding: 5px; display: inline-block;">Align the tabs of AE-UT Adaptor with the matching slots in the nozzle assembly, then twist the adaptor until it stops securely</p>	<p>⑥ Start spray by opening water and air valves.</p>  <p style="border: 1px solid black; padding: 5px; display: inline-block;">Open the water valve first. Then open the air valve</p>

●How to detach the nozzle from the AE-UT Adaptor (for nozzle cleaning)


①Close first water then air valves to stop spraying.
Hold UT-LOCK with both hands and pull to remove, then detach AE-UT Adaptor and nozzle from body.

②Remove the nozzle from the AE-UT Adaptor.

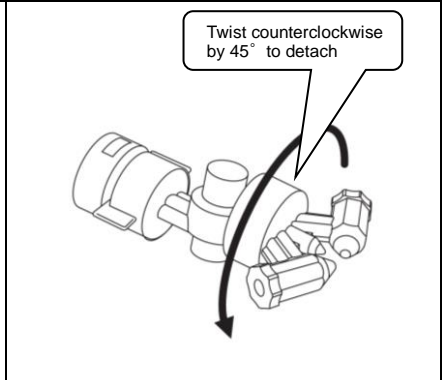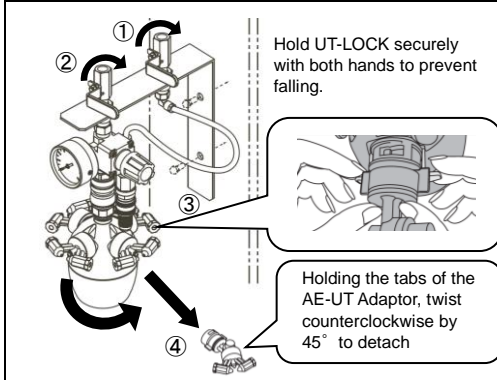

Caution

1. Install humidifier body in vertical position after assembling AE-UT Adaptor.
If the body is not vertical, some dripping may occur at spray shutoff.
If the nozzle direction is set straight downward with the AE-UT Adaptor and the humidifier body is tilted, or the supplying hoses are too long, water may leak from the nozzles at spray shutoff.
In such case, readjust the humidifier body assembled with AE-UT Adaptor to a vertical orientation, or set the spray direction upward slightly.
2. Never attempt to disassemble an AE-UT Adaptor.
3. There are holes on the tabs of UT-LOCK
so that wire can be put through to prevent it falling off.
4. O-ring and Packing included in AE-UT Adaptor may deteriorate from use, which may cause water leaking. If water leaks from the humidifier body, it is recommended to replace O-ring and packing of AE-UT Adaptor.
For more information, please contact us or our local sales office.

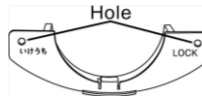

“The Fog Engineers”
H. IKEUCHI & Co., LTD.

Daiichi Kyogyo Bldg., 1-15-15, Awaza, Nishi-ku,
Osaka 550-0011 Japan

Tel: +81-6-6538-4015 Fax: +81-6-6538-4022

e-mail: overseas@kirinoikeuchi.co.jp <http://www.kirinoikeuchi.co.jp/eng/>