

H. Ikeuchi & Co., Ltd.  
Nishiwaki Hori Factory, Japan


### **Instruction Manual for Plastic AAP and AJP\* Series Spray Nozzles**

Plastic nozzles are more breakable and far more fragile than metal nozzles.  
Please handle them with care and follow the instructions below.

\*The standard AJP-PPS series has a different manual.


#### **I. Installation Instructions**

1. Be sure to flush the pipes before installing the nozzle to remove any dirt and foreign matter.
2. Apply sealant or sealing tape to the nozzle or pipe threads.
3. Pay attention to the spray direction when installing the nozzle.
4. First hand-tighten the nozzle, then lightly tighten it with an appropriate tool to adjust the spray direction. Be careful not to over-tighten.
5. Do not apply any shock or strong force to the nozzle.

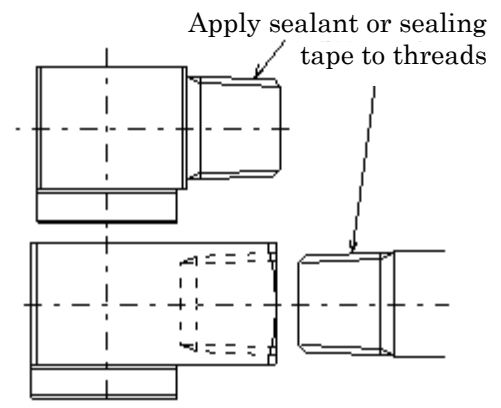

#### **II. Handling Instructions**

1. Check the nozzle orifice regularly for clogging.
2. If the nozzle is clogged, remove it from the pipe and clean out the clog with a soft brush.
3. Do not attempt to clean the nozzle tip/orifice with nails, pins or other hard objects. This will damage the nozzle.

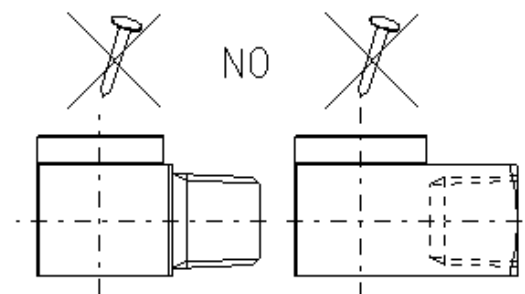

Note: Appearance and dimensions may differ depending on nozzle code.