Ultra-Compact Design, Low Flow Rate Fine Fog Nozzles with Spray Control Adaptor


SCBIM



- ■Further miniaturized version of CBIM series producing fine atomization.
 All SCBIM models come with a spray ON/OFF control adaptor.
- ■Available in liquid pressure or liquid siphon feed type, two spray pattern types (flat spray or full cone spray)—nine varieties in total.
- ■Able to provide the lowest flow rate among all of our pneumatic spray nozzles.

APPLICATIONS

- ■Spraying: Mold release agent, lubricant, deodorant, oil, surface treatment agent, rust preventive, honey, insecticide, aqueous urea
- ■Cooling: Dies, gas, glass, steel plates, steel pieces, castings, automobile bodies, plastic products
- ■Moisture control: Paper, flue gas, ceramics, concrete
- ■Cleaning: Printed circuit boards, glass tubes (for SCBIMV and SCBIMV-S only)

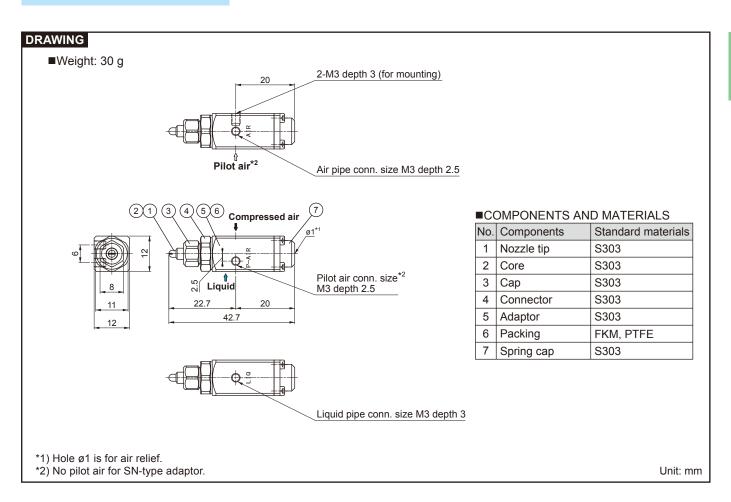


SCBIMV (Flat Spray)

- ■Pneumatic spray nozzle producing fine atomization with a mean droplet diameter of 100 µm or less.*1
- ■Flat spray pattern.
- ■Features large turn-down ratio under liquid pressures of 0.1–0.3 MPa.
- ■The spray distribution varies depending on the air-water ratio.


 At a low air-water ratio, the distribution takes a mountain shape, and it shifts to even, as the air-water ratio increases.
 - *1) Droplet diameter measured by laser Doppler method

FLOW-RATE DIAGRAMS

See the flow-rate diagrams for CBIMV on page 32.







PERFORMANCE DATA

Spray	Air	Air pressure (MPa)		Spray	capac	•		consu		n (L/min	, Normal)	1	Spr	ay wid	th*³	Mean droplet dia. (µm)	Free passag diameter (m		_
angle code	code		0.1		0.15		0	0.2		25	0.	3	Liquic	l press	. (MPa)	Laser	Tip	Ada	ptor
*2		, ,	Liquid	Air	Liquid	Air	Liquid	Air	Liquid	Air	Liquid	Air	0.1	0.15	0.25	Doppler method	orifice	Liquid	Air
110	01	0.2 0.3 0.4	1.3 0.5 —	6.8 10 —	2.8 1.1 0.6	5.3 9.5 12.4	2.3 1.1	8.4 12	4.0 2.2	— 6.5 11	_ _ 3.3	— 9.6	280 240 —	330 250 220	— 380 300	20-100	0.2	0.6	0.5
00	005	0.2 0.3 0.4	0.7 0.25 —	3.4 5.0	1.5 0.6 0.3	2.6 4.7 6.3	1.25 0.55	4.1 6.0	2.0 1.1	— 3.2 5.5	— — 1.65	 4.8	230 170 —	260 200 160	280 250	20-100	0.1	0.4	0.3
80	01	0.2 0.3 0.4	1.3 0.5 —	6.8 10 —	2.8 1.1 0.6	5.3 9.5 12.4	2.3 1.1	8.4 12	4.0 2.2	— 6.5 11	_ _ 3.3	— 9.6	220 140 —	250 200 140	 250 220	20-100	0.2	0.6	0.5
45	005	0.2 0.3 0.4	0.7 0.25 —	3.4 5.0	1.5 0.6 0.3	2.6 4.7 6.3	1.25 0.55	4.1 6.0	2.0 1.1	— 3.2 5.5	 1.65	 4.8	120 80 —	150 110 80	— 150 140	20-100	0.2	0.4	0.3
45	01	0.2 0.3 0.4	1.3 0.5 —	6.8 10 —	2.8 1.1 0.6	5.3 9.5 12.4	2.3 1.1	— 8.4 12	4.0 2.2	— 6.5 11	 3.3	— — 9.6	120 80 —	150 110 70	— 150 120	20-100	0.3	0.6	0.5


^{*2)} Spray angle measured at compressed air pressure of 0.3 MPa and liquid pressure of 0.1 MPa.

SCBIMJ (Full Cone Spray)


- ■Pneumatic spray nozzle producing fine atomization with a mean droplet diameter of 100 µm or less.*1
- ■Full cone spray pattern.
- Features large turn-down ratio under liquid pressures of 0.1–0.3 MPa.
 - *1) Droplet diameter measured by laser Doppler method

FLOW-RATE DIAGRAMS

See the flow-rate diagrams for CBIMJ on page 35.







PERFORMANCE DATA

Spray	Air consumption code	Air pressure (MPa)		Spray capacity (L/hr) & Air consumption (L/min, Normal) Liquid pressure (MPa)										ay wid		Mean droplet dia. (µm)	ا منم	Free passage diameter (mm)	
angle code			0.1		0.15		0	0.2		0.25		0.3		Liquid press.		II)onnier	Tip	Ada	ptor
*2			Liquid	Air	Liquid	Air	Liquid	Air	Liquid	Air	Liquid	Air	0.1	0.15	0.25	method	orifice	Liquid	Air
20	005	0.2 0.3 0.4	0.7 0.25 —	3.4 5.0	1.5 0.6 0.3	2.6 4.7 6.3	1.25 0.55	4.1 6.0	2.0 1.1	3.2 5.5	 1.65	 4.8	25 30 —	20 30 30	 25 30	20-100	0.7	0.4	0.3
20	01	0.2 0.3 0.4	1.3 0.5 —	6.8 10 —	2.8 1.1 0.6	5.3 9.5 12.4	2.3 1.1	— 8.4 12	4.0 2.2	— 6.5 11	_ _ 3.3	— 9.6	25 30 —	20 30 30	 25 30	20-100	0.8	0.6	0.5

^{*2)} Spray angle measured at compressed air pressure of 0.3 MPa and liquid pressure of 0.1 MPa.

^{*3)} Measured at spray distance of 100 mm from nozzle.


^{*3)} Measured at spray distance of 100 mm from nozzle.


SCBIMV-S (Flat Spray)


- ■Pneumatic spray nozzle producing fine atomization with a mean droplet diameter of 30 µm or less.*1
- ■Flat spray pattern.
- ■Liquid siphon feed type (liquid pressure device is not required).
- ■Even spray distribution across the entire spray area.

FLOW-RATE DIAGRAMS

See the flow-rate diagrams for CBIMV-S on page 37.

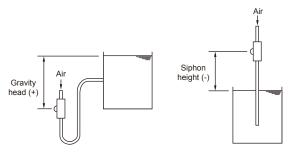



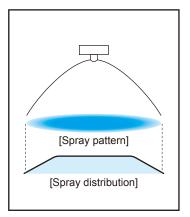


PERFORMANCE DATA

Spray	Air	Air	Air	Air Spray capacity (L/hr) Spray Mean dr	Mean droplet	Free pa	assage d	lia. (mm)					
angle code	consumption code	pressure (MPa)	consumption	Gravity head (mm)		Siph	on height	(mm)	width*3	diameter (µm) Laser Doppler	Tin	Ada	ptor
*2			(L/min, Normal)	+300	+100	-100	-300	-500	(mm)	method	orifice	Liquid	Air
	005S	0.2 0.3	3.75 5.0	0.4 0.29	0.38 0.27	0.36 0.25	0.34 0.23	0.32 0.21	160 165 20-30		0.2	0.4	0.3
80	0000	0.4	6.25	0.16	0.15	0.13	0.11	0.1	170	20 00	0.1	0	0.0
00		0.2	7.5	0.74 0.55	0.68	0.65	0.61	0.57	160		0.2		
	01S		0.3 10		0.52	0.5	0.47	0.43	165			0.6	0.5
		0.4	12.5	0.38	0.34	0.3	0.27	0.25	170				

^{*2)} Spray angle measured at compressed air pressure of 0.3 MPa and liquid siphon height of 100 mm.

^{*3)} Measure at spray distance of 100 mm from nozzle and liquid siphon height of 100 mm.

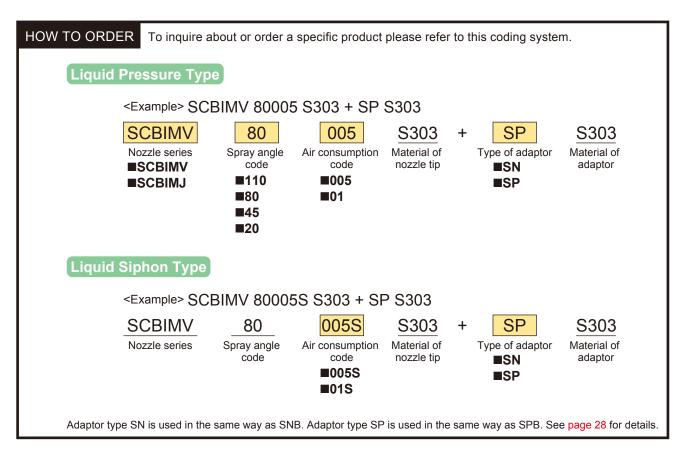

^{*1)} Droplet diameter measured by laser Doppler method


How to Use Spray ON/OFF Control Adaptors

■SNB Adaptor (CSN, SN Adaptors)

The spray is turned ON/OFF by turning the compressed air ON/OFF.

Use with compressed air pressure of 0.2 MPa or higher. Adaptor types **CSN** (see page 31) and **SN** (page 40) are used in the same way.

Operation Timing Diagram													
Compressed	OFF	ON	OFF	ON	OFF								
Liquid	Stop	Spray	Stop	Spray	Stop								

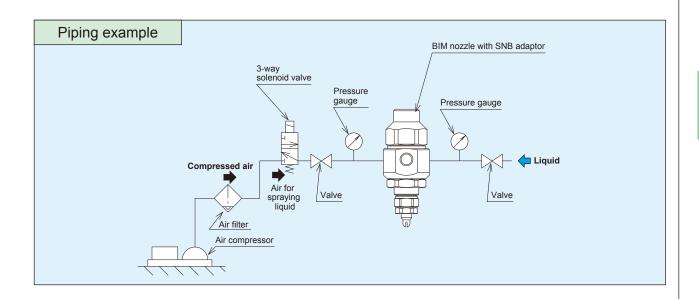


■SPB Adaptor (CSP, SP Adaptors)

This type has a built-in shutoff piston that operates on pilot air pressure. The spray is turned ON/OFF by turning the pilot air ON/OFF. Use with pilot air pressure of 0.2 MPa or higher.

As even low pressure atomizing air can be used, production of a range of fine to coarse fog is possible. Best-suited for when there is concern about scattering droplets.

Adaptor types **CSP** (see page 31) and **SP** (page 40) are used in the same way.

Compressed OPF ON OFF ON OFF Con Spray Stop Spray Stop

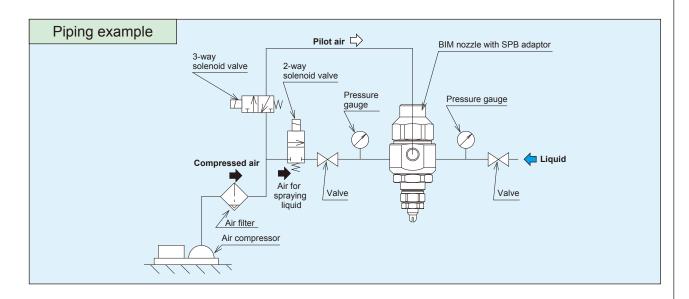

List of Nozzle Tip Interchangeability

Nozzle tips with \circ are interchangeable with each other to change spray angle and spray pattern.

CBIM Series

											Liq	uid p	ress	ure t	ype										Lic	quid	sipho	on ty	ре	
									СВ	IMV							СВ	MK		C	BIM	J			CE	BIMV	/-S		CBI	MK-S
			11001	11002	11004	110075	80005	8001	8002	8004	80075	45005	4501	4502	4504	45075	6004	60075	20005	2001	2002	2004	20075	80005S	8001S	8002S	8004S	80075S	6004S	600758
		11001		_	<u> </u>]	0		<u> </u>			0		_			_		0	_ :	_	_	_	_	_	_	_		
		11002					<u> -</u> _	ļ±.	0	<u> </u>		<u> </u>	_	0				_			0						-		<u> </u>	
		11004				<u> </u>	ļ <u> </u>	<u> </u>	<u> </u>	0		<u> </u>		<u>: —</u>	0		0				_ :	0							<u> </u> .	1-
		110075	_	_	<u>: -</u>	<u>: \</u>	_	<u>: -</u>	! —	<u>: -</u>	<u>; O</u>	_	_	<u>: -</u>	<u>: – </u>	0	_	0	-	_	<u> </u>	_	0	_	_	_	<u>: — ;</u>	<u> </u>	_	! —
		80005			<u>: —</u>		177	<u> </u>	<u> </u>	<u> </u>	<u>.</u> —	0		<u>; —</u>	— 	<u></u>			0		; — ;	_	<u> </u>		_			<u> </u>		<u> </u>
		8001	0	ΙΞ.	<u> </u>	10	ļ.—.	<u> </u>	<u> </u>	<u> </u>			0	¦	<u> </u>	<u> </u>			:	0	<u> </u>		<u> </u>				::	ξΞ.		10
	CBIMV	8002		0	<u> </u>	1	↓ .	<u>; </u>		<u>. </u>	<u>; —</u>	-		0	<u> </u>	<u> </u>			;		0		<u> </u>		<u> </u>		<u>: — </u>			1-
		8004		<u> </u>	<u> </u>		↓ .	ļ. II.		¦ ->>	<u> </u>			<u> </u>	<u>, O</u> .				:		¦	0	¦		<u> </u>			<u> </u>		ĻΞ
		80075	_	_	_	0	_	<u>: -</u>	_	_		_	_	_	_	0		0	_	_	_	_	0	_	_	_	_	_	_	_
pressure type		45005	_	ļ. T	¦	ļ	10	<u> </u>	 -	¦		>	<u> </u>	¦	<u> </u>	¦			0		¦		¦		ļ 		¦	ļ. .		ļ.T.
		4501	0		;		↓	0	1	; -	<u> </u>			<u> </u>	ļ. T					0								<u> </u>		μ
		4502		<u>. O</u> .		ļ	∤-	ļ	<u> </u>	ļ	ļ-T-			>	<u>.</u>								ļ				¦	ļ. T		ĻΞ
ess		4504 45075			0		 	<u> </u>	{-∓-	<u> </u>	0			ŧ-=-	>		0										:	<u>-</u>		}==
ğ		6004	_	_		10	-	; -	Η.	_	10		_	-			_	0		_			0		_	_	_	_		H
Lidnid	CBIMK	60075	Ξ-	ΕΞ.	¦-⊻-	-	1 -Ξ-	ŧΞ	ł-Ξ-	<u>:</u> ۲		- =	ΕΞ-	ŧΞ-	<u> </u>	-	>	<u> </u>	ŀ <u>-</u>	Ξ-	:==:		-	- <u>=</u>	Ξ-	-Ξ-	ŧ-Ξ-¦	ΈΞ.	ΙΞ-	ŀΞ
Ĭ		20005			=	-	0	 _		=		0			-															
		2001	<u></u>		¦		1-≚-	<u> </u>		¦	¦	<u> </u>		 	¦ ·	¦				<u> </u>	 		¦			 -	;	 		<u> </u>
	CBIMJ	2002	<u>~</u>		!	1	 	-			!			: 0		!			1	>							!!			12
	CDIIVIO	2004		- <u></u>		12	 	:	;- <u>-</u> -					¦- <u>-</u>													;;			12
		20075			: <u> </u>	: 0	1	:=:	!	: <u> </u>	. 0			!	: <u> </u>	0	- <u>-</u> -	Ö	1		: :				: -		:	:		12
		80005S	_	_	<u> </u>	 -	1-	! _	!	-	-	_	-	<u> </u>	i _	-	_	_	_	_	- 1	_			_	_	-	-	_	
ype		8001S			:	:	1	!	!	:	!			:	:·	:					: :		:		·		! !	:		- 1
'n	CBIMV-S	l +			!	ÌΞ	1	[=	1	; <u></u> -	1			†	72				= 1						>	· ·	1	[=		ÌΞ
ğ		8004S			!		1	-	!	:	!			;	·						;		:			- <i></i> `			ō	-1
g	l	80075S	_	_	!		1	[-	1	[_	<u> </u>	_	_		_	- 1			_	-		-	_		1		0
Liquid siphon type	ODIMIK O	6004S	_	_	-	-	-	-	-	-	-	_	-	-	-	-	_	-	-	_	-	_	-	_	-	-	0	-		; —
_	CBIMK-S	60075S	_		-	[-]	1	[=	-	[-	_	-	<u> </u>	-	-	_	_		_		_	_	_	_	-	-	0	`	/

SCBIM Series

	001100										
					Liquio	d pressure	e type			Liq sipt typ	non
					SCBIMV		SCE	BIMJ	SCBI	MV-S	
			11001	80005	8001	45005	4501	20005	2001	80005S	8001S
		11001		<u> </u>	0	<u> </u>	0	_	0	_	_
	SCBIMV	80005				0		0		_	_
Liquid		8001	0	<u> </u>		_	0		0	-	_
pressure		45005		0	_			0	_	_	_
type		4501	0		0	_			0	_	_
	SCBIMJ	20005	_	0	_	0	_		_	_	_
	SCBIIVIJ	2001	0	· –	0	_	0			_	_
Liquid siphon	CODIMALO	80005S	_	<u> </u>	<u> </u>	. –	_	_	_		_
type	SCBIMV-S	8001S		<u> </u>		_			_	_	

CBIM Series Cap Interchangeability

Caps with \bigcirc are interchangeable with each other.

Adaptor typ	Adaptor type			Т	CSN/CSP				
		005	01	02	04	075	005	01	02
	005		0	0			_		
	01	0		0	-	-	_	_	-
Т	02	0	0		_	_		_	_
	04	_	_	_		0	_	_	_
	075	_	_		0		_	_	_
	005							0	0
CSN/CSP	01						0		0
	02	_	_	<u> </u>	<u> </u>	_	0	0	

Note:

- 1) Air consumption codes available for T-type adaptor are 005, 01, 02, 04, and 075.
- 2) Air consumption codes available for CSN- and CSP-type adaptors are 005, 01, and 02 only.

When changing an adaptor type of the existing CBIM nozzle between T, CSN, and CSP types, it is possible to continue to use the same nozzle tips and core, which are the common parts (the cap is not).